



Notes:

**The factory Front Leaf Spring Hanger is two piece.
Only remove the pice that holds the leaf spring.
Leave the bottom factory "L" Bracket with the rivet holes.**

**Use rivet hole from the
factory "L" bracket to locate
the front Leaf Spring Hanger**